

easicook.co.uk

Spare Parts Manual

**Leading UK Distributors
of Catering Equipment Since 1977**

Sales - Repairs - Spares

Tel: 029 20747567

Fax: 029 20214100

Email: info@easicook.co.uk

DISHWASHER SERIE

45/55

INSTALLATION

USE

MAINTENANCE

OVERALL DIMENSIONS

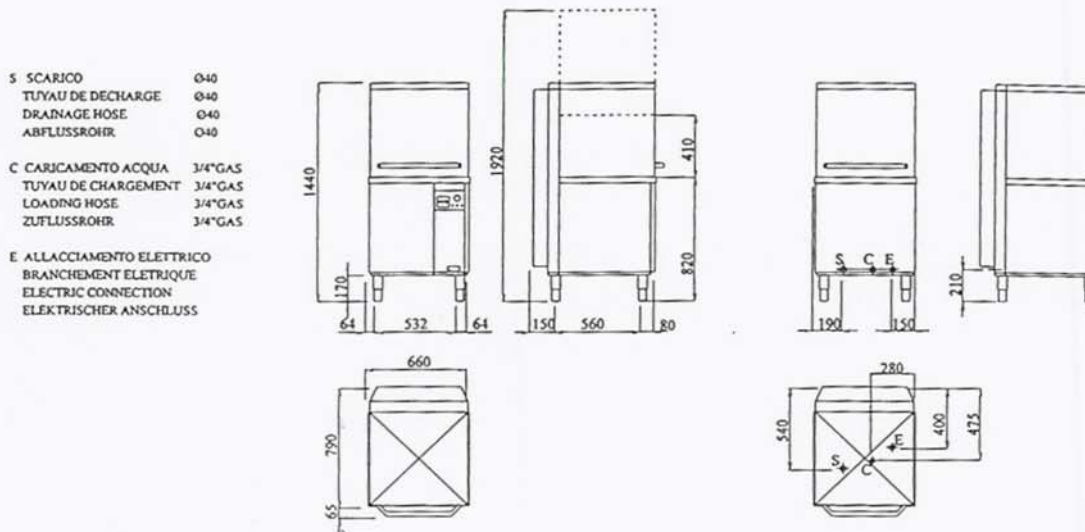


Figure 1

TECHNICAL DETAILS	45 (DP)	55(DP)
BASKETS PER HOUR	60/24	
BASKET DIMENSIONS	500 x 500 mm	
ELECTRIC FEEDING	220-1/50	220-3/50 - 380-3N/50
TOTAL POWER	7,2 kW	10,2 kW
BOILER HEATING ELEMENT	6 kW	9,0 kW
TANK HEATING ELEMENT	3 kW	
WASHING PUMP	1,1 kW	1,1 kW
WASHING PUMP DELIVERY	520 l/min	520 l/min
TANK CAPACITY	36 l	
BOILER CAPACITY	8,5 l	14,5 l
WATER PRESSURE FOR RINSING	1 + 4 bar	
WATER HARDNESS	3,5 + 14 °E	
WATER QUANTITY PER CYCLE	3,5 l	
WORKING CYCLES	60/150 +∞	
NET WEIGHT	145 Kg	152 Kg
NOISE LEVEL (according to DIN 45635)	<70 dB (A)	

Warning


The machine is used for washing of dishes, glasses, cutlery, and trays in the kitchen.

- Before installing and using these machines, read carefully the instructions, especially the ones regarding security rules.
- Only qualified technicians following the instructions of the manufacturer should carry out installation.
- Only people trained for it should use the machine.
- In case of damage or bad working, switch it off and call an authorised technical service.
- Ask only for original spare parts.

INSTALLATION

CONNECTION OF THE WEIGHT

After removing the back-plate it is necessary to lift the hood by hand and to keep it in the highest position. Link the snaphooks of the stainless-steel cables to the eye of the weight rod. Then place the back plate again and go on with the water and electric connections.

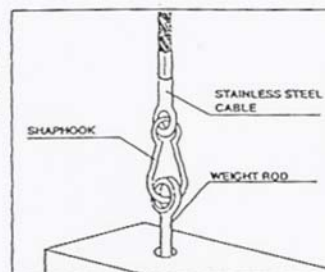

WATER CONNECTION

The installation of the dishwasher requires the connection of the hydraulic hoses supplied with the machine, and in particular:

- 3/4" GAS threaded filling hose
- 1½" draining hose (1" for the dishwashers with drain pump)



Prior to connecting, check that the following conditions exist:

- The machine is fitted with a booster pump. Anyway, the water pressure must be at least of 1 bar. For pressure higher than 4 bar a pressure reducer must be installed.
- The water hardness must be between 3.5 ° and 14 °E (0,5-2 m moll/l); for harder water install a water softener with ionic exchange of a capacity of 16 litres of resin minimum.

ELECTRICAL CONNECTION

WARNING

- During the electric connection of equipment working with 3-phase alternating current check the right rotating direction of the pump motor!
- We recommend efficacious machine grounding.
- The manufacturer declines any responsibility if this rule is not respected. The firm also declines any responsibility for a wrong electric voltage connection.

- The manufacturer declines any responsibility if this rule is not respected. The firm also declines any responsibility for a wrong electric voltage connection.

The machine is not supplied with a plug. It must be connected to the electrical grid only by technicians, through a plug or a main switch, in order to have the possibility to remove the machine from electrical grid during the preliminary operations or the maintenance.

The machine must be connected also to an unipotential system of compensation through a screw situated on the base of the machine and marked " $\overset{E}{\equiv}$ ".

The dishwasher's models 45 and 45 DP are conceived to work under the following specification:

- 220-240 V (3~) 50Hz

The dishwasher's models 55 and 55 DP are conceived to work under the following specifications:

- 380-415 V (3N~) 50Hz
- 220-240 V (3~) 50Hz

The factory arrangement matches the first specification; the second one can be obtained following the included electrical scheme.


USE

PRELIMINARY OPERATIONS

Prior to switching on the dishwasher check the following conditions:

- Check that the supply and draining pipes, supplied with the machine, are connected to the main water line.
- The machine is supplied with automatic rinse aid dispenser and with an automatic detergent dispenser. The manufacturer already sets both dispensers. Be sure that the dispensers are connected to the relevant tanks filled up with liquids for industrial use with low viscosity and not foaming, otherwise it is possible to break the dispenser.
- Verify if the intake and the surface filters are in the right position.
- Verify if the overflow pipe is in the right position.
- Shut the door and, if it is present, open the external water valve.

Figure 2

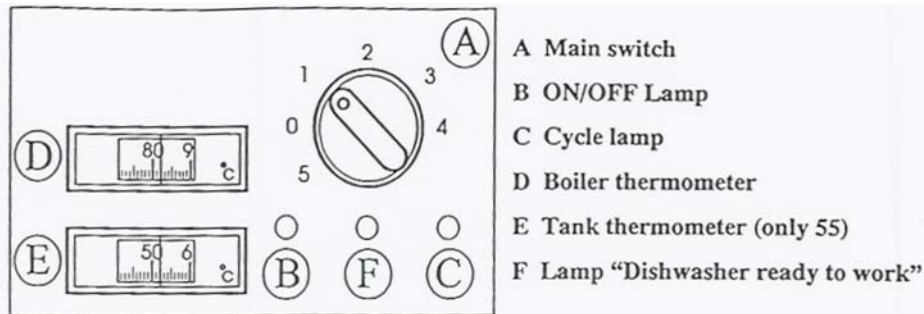

WATER FILLING AND PRE-HEATING

With reference to fig.2, to switch the machine on turn clockwise the general switch (A) to position 1 shown by the lighting of the light (B).

Attention: during the installation, when the Water Air Gap is empty, switch the dishwasher on keeping the hood open in order to fill first the Water Air Gap and later the tank of the dishwasher up to the prefixed level.

Then, close the hood. Now the machine automatically switches on boiler and tank heating elements. When the prefixed temperatures are reached the lamp (F) lights on and the machine is ready to start the working cycle.

Check that the thermometer of the boiler (D) and of the tank (E) if present show the right temperature.

ATTENTION: the manufacturer at the following temperatures rates the internal thermostats:

- boiler temperature: 82°C
- tank temperature: 55°C

WORKING CYCLE

- Remove all the solid remainders from the dishes and put them inside the basket.
- Select the desired washing cycle by using the switch (A); in position 2 has the machine a short cycle, in position 3 a long one, the position 4 is for a continuous working, suitable for very dirty dishes or glasses until the operator turns the switch in position (2) or (3) in order to complete the working cycle.
- Slide the basket into the machine and close the hood; the machine automatically begins the washing and rinsing cycles, shown by the lamp (C), and automatically activates the rinse-aid dispenser. Between the washing and the rinsing there is a dripping pause. The end of the working cycle is visualised by the extinction of the lamp (C).

ATTENTION: The dishwasher is provided with the device **THERMOLOCK**, which makes the washing-cycle longer so that the water in the boiler can reach the prefixed temperature.

- To begin a new working cycle repeat the above operations.
- The detergent is added automatically at each cycle through the dispenser that has been set by the manufacturer during the testing phase. It must be adjusted following the instructions regarding the quantity given by the detergent supplier.
- Before switching the machine off, make sure that the working cycle is completely over. Then turn the general switch (A) in (0). The lamp (B) will automatically switch off.

MODELS WITH DRAIN PUMP

In the models fitted with drain pump this pump starts working in the following situations:

- When the filling valve of the W.A.G. works. This is necessary because in case of malfunction of the level probe the water can flow to the washing tank through the overflow pipe of the W.A.G.
- When the rinsing pump works. This is the normal working situation of the drain pump that drains the water from the washing tank through the overflow pipe during the filling or the rinsing cycle.

In both the situations the drain pumps start working automatically. But if you need to drain the washing tank at the end of the working day, turn the main switch (E) of the figure 2 in the position (2). Before you have to open the door and to remove the overflow pipe. During this phase you can keep the door open.

At the end do not forget to turn the main switch (A) in the position (0) after emptying the washing tank, because a long-lasting work of the drain pump without water can damage the pump itself.

SAFETY SYSTEMS

- By opening the door every function of the machine stops, except for the heating of water in the boiler and in the tank. When you close the door the interrupted function starts again.
- The level switch controls automatically the water level in the tank and allows the machine to work only if the heating elements are below the water level either in the boiler or in the tank.
- The washing pump has a thermal control, which stops it in case of thermal overload.
- An overflow pipe drains the water which has been brought in during the rinsing cycle and allows a continuous change of water in the tank. It avoids the overflowing of water in case of bad working of the level switch too.
- The W.A.G. tank is provided with an overflow pipe, which drain the exceeding water from the washing tank in case of malfunction of the level switch. It is recommended, anyway, to close the alimentation water tap when the dishwasher doesn't work.

MAINTENANCE

Before cleaning and maintenance always remove the plug.

WATER DRAINAGE AND TANK CLEANING

After switching the machine off, water must be drained out of the tank by removing the overflow pipe from its place (for the models with drain pump turn the main switch (E) to the position 2. The lamp (B) will light on.


Clean the tank and remove all scraps and remainders from its bottom.

Clean accurately the filters after having removed them.


In models with drain pump clean also the filter of the pump by unscrewing the stopper on the front panel of the machine.

STAINLESS STEEL PARTS CLEANING

To clean the stainless steel parts use soaped water or usual degreasing products.

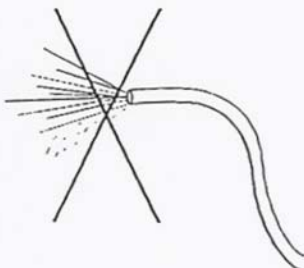

Warning: water jets sprayed directly onto the electric appliances can cause electric shocks. The use of abrasive ferrous products (like steel wool) can prime with their oxide deposits surface galvanic corrosion.

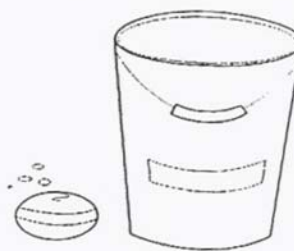

PERIODIC MAINTENANCE

Periodically check and clean both the washing and the rinsing jets-nozzles. Unscrew them and remove possible deposits.

When necessary, remove scaling and disinfect the tank using the products normally available on the market.

DRAIN PUMP

After emptying the dishwasher through the drain pump, clean the filter of the pump according the following instructions.

- Turn the switch (A) of the figure 2 in the position (1);
- Switch the electric feeding of the machine off;
- Remove the filter of the pump taking care to dry the residual water inside of the pump itself.
- Clean the filter and place it correctly in its position again.

OPERATING INSTRUCTIONS AND MAINTENANCE

PERISTALTIC DOSING PUMP WITH ON-OFF TIMER CODE NO. 5695

Peristaltic pump with quantity to be adjusted by means of a timer.

Max. Suction height: 1,5 m

Dosing time ($\pm 15\%$): between 0 and 4 sec

Off time ($\pm 15\%$): between 0 and 4 sec

Warning

IF ANY OF THE ABOVE-MENTIONED INSTRUCTIONS IS NOT RESPECTED THIS CAN DAMAGE PERSONS AND CAN CAUSE MALFUNCTIONS OR DAMAGE TO THE APPLIANCES.

When installing the dishwasher verify the following points:

- tubing material is suitable to the liquid
- the available power supply is similar to the indicated one
- suction tube is positioned in the liquid container and connected to the suction of the pump (represented on the lid with Δ)
- delivery tube is connected to the delivery of the pump (represented on the lid with ∇) and positioned on the tank injection
- the protection lid is properly positioned in its seat

IMPORTANT: Before carrying out any operation on the pump, disconnect the power supply on the dosing pump!

Regulation of the dosing time


The pump works automatically if electricity is present on the supply cable and makes continuously a cycle of pause-working.

If the trimmer has rotated anticlockwise the pump is always off, if rotated clockwise the pump is always on.

In the equidistant the cycle of pause-working lasts 3 seconds.

Tubing substitution CODE NO. 5696

- Disconnect the pump from the power supply.
- Take off the transparent lid on the hydraulic group.
- In order to dismount the tube turn the roll holder so that the rollers are on a vertical line.
- Remove from its seat the connection on the left side of the pump, alternatively pull the tube out of its seat and manually rotate the roll holder clockwise until it is possible to extract the right hand side connection from its position.
- In order to mount the tube turn the roll holder so that the rollers are on a horizontal line.
- Insert the connection in its seat on the left of the pump with the curved side towards the floor.
- Alternatively push the tube into its seat and manually rotate the roll holder clockwise until it is possible to insert the right hand side connection into its seat.
- Insert the protection lid starting from the top, with the shear facing the pump and pushing slightly on the sides so to hear the click.

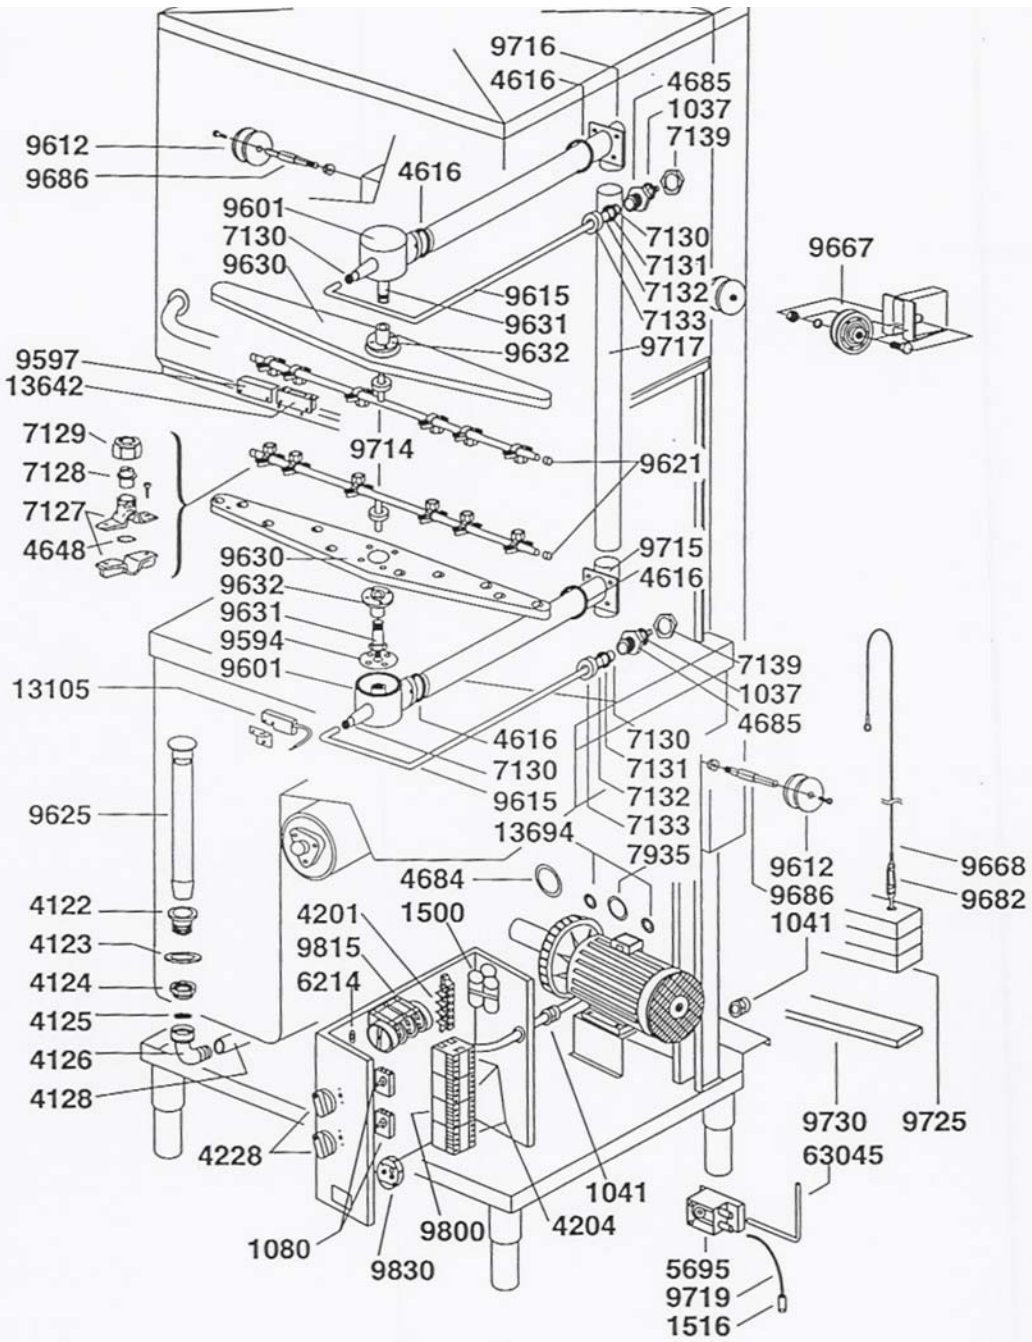


Modello
 Modella
 Model
 Model

45 - 55

Dis. N° EE.AT.013

Data
 Date
 Datum
 Date
 17-02-99

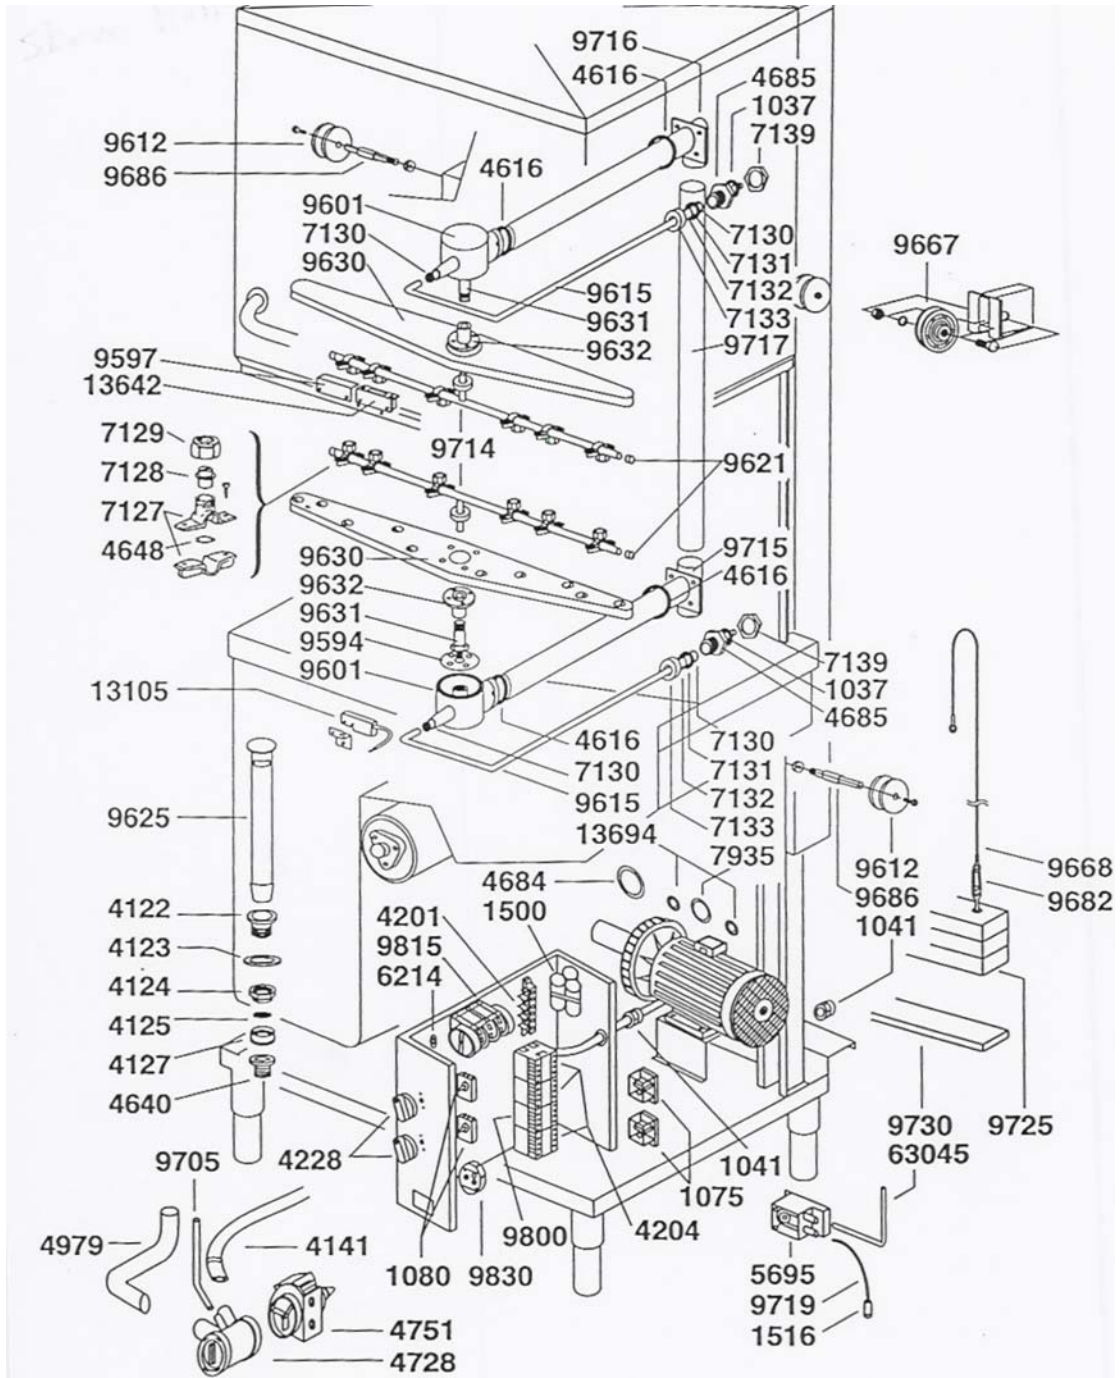


Chef Quip

Modello
Modelle
Model
Model

V 45DP - 55DP

Dis. N° EE.AT.014

Data
Date
Datum
Date 17-02-99

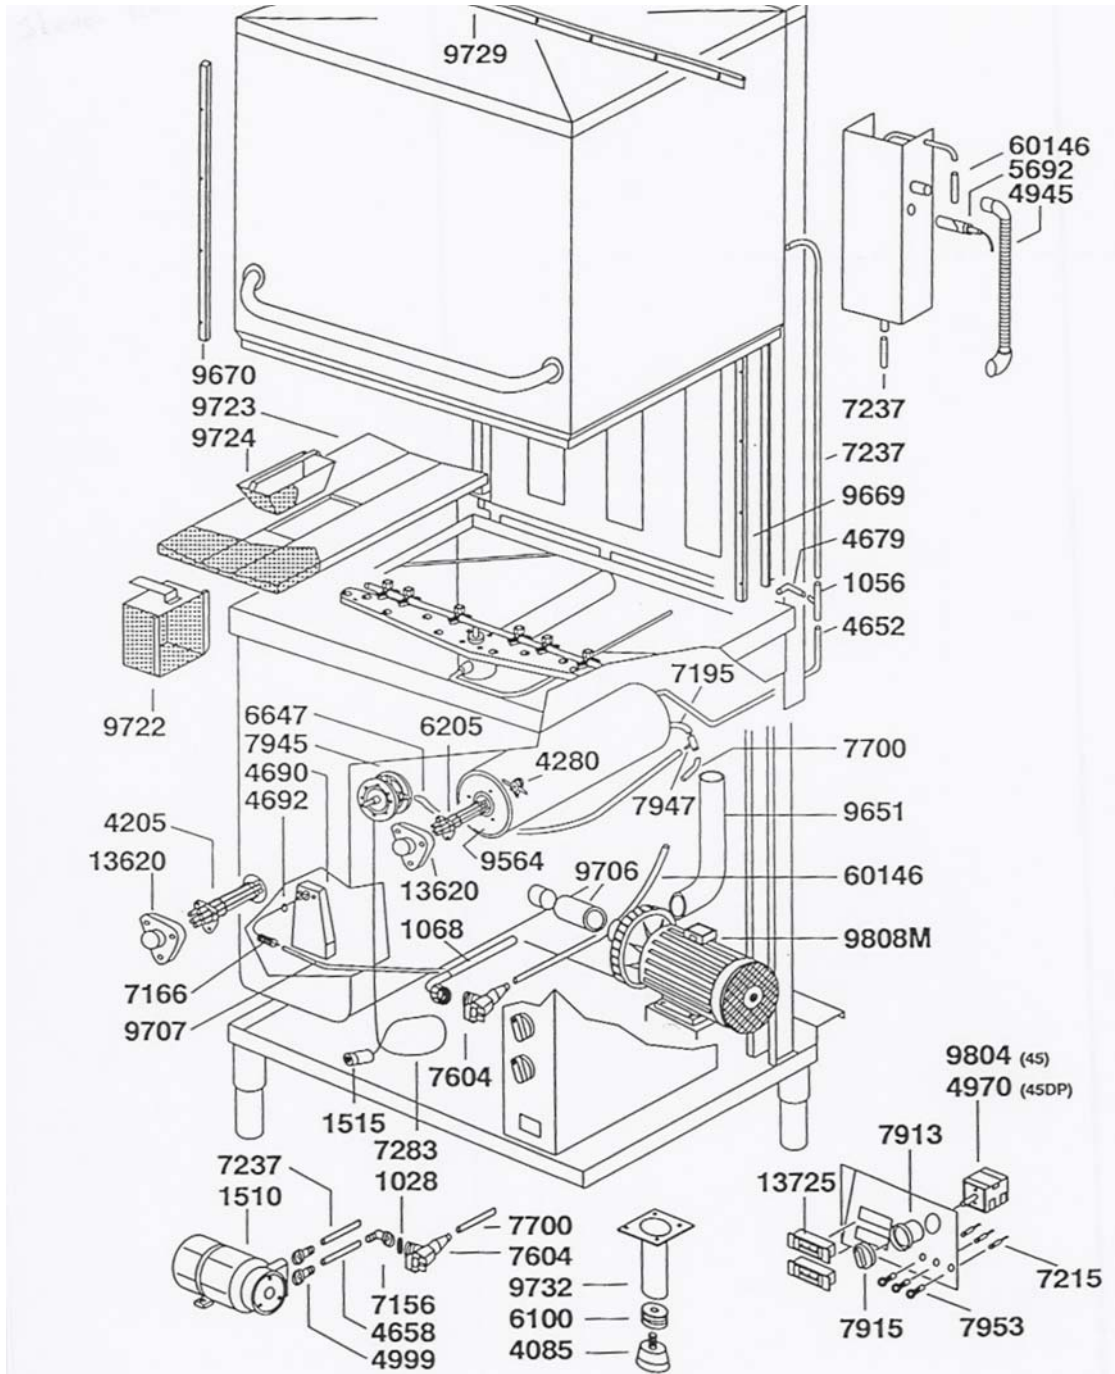


Chef Quip

Modello
Modello
Modello
Modello

45 - 45 DP

Dis. N° EM.AT.011

Data
Date
Datum
Date 17-02-99

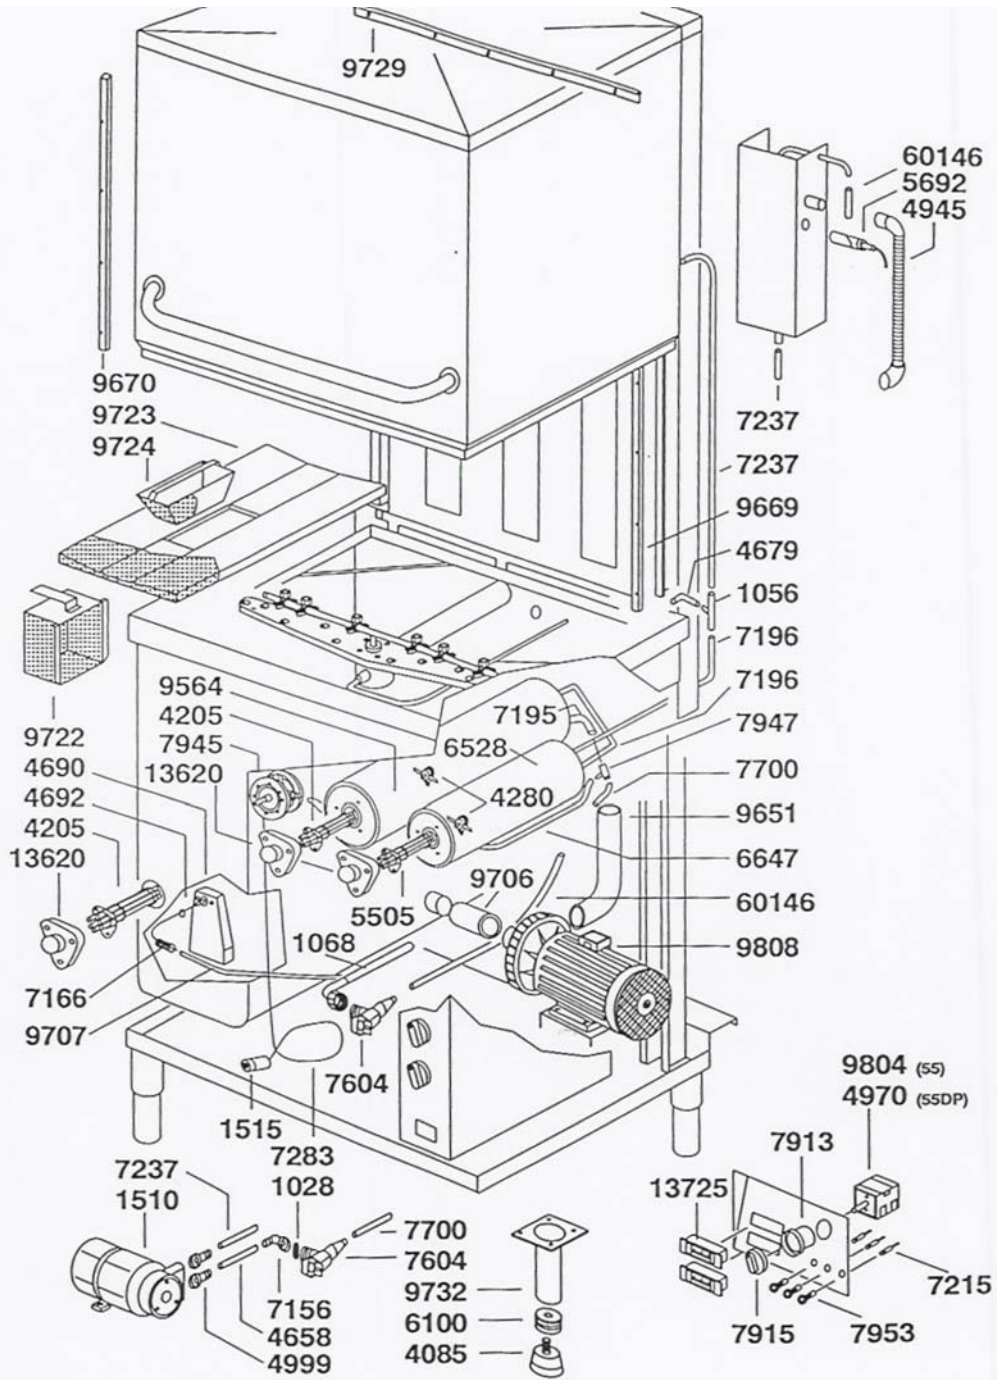

Modello
Modelle
Model
Modelt


55 - 55 DP

Dis. N°EM.AT.012

Data
Date
Datum
Date 17-02-99





IG	INTERRUTTORE GENERALE HAUPTSCHALTER	INTERRUPTEUR GENERAL MAIN SWITCH
L1	SPINA PER LA LAMPADINA LAMP SOCKET	SPINNE FÜR GLÜHLEUCHTE LAMP SOCKET
RV	RESISTENZA VASCA TANK HEATER	RESISTANCE CUVE TANK HEATER
RB	RESISTENZA BOLLER BOLLERHEIZER	RESISTANCE SURCHAUFFEUR BOILER HEATER
PL	PRESSOSTATO LIVELLO NIVEAUPRÜCKSWITCHER	PRESSOSTAT NIVEAU LEVEL PRESSURE SWITCH
EP	ELETTROPOMPA ELEKTRISCHLE PUMPE	ELECTROPOMPE ELECTRIC PUMP
T2	TIMER CICLO SPRECHLEITUNG TIMER	TIMER CYCLE CYCLE TIMER
C4	CONTATTI DI SERVIZIO KONTAKT	CONTACTEUR DE SERVICE SERVICE CONTACTOR
TB	TERMOSTATO BOLLER BOLLERTHERMOSTAT	THERMOSTAT SURCHAUFFEUR BOILER THERMOSTAT
TV	TERMOSTATO VASCA TANKTHERMOSTAT	THERMOSTAT CUVE TANK THERMOSTAT
M2	MICROMOTORE LENTO LANGSAMER MIKROMOTOR	MICROMOTEUR LENT SLOW MICRO MOTOR
L4	SPINNA PER LA LAMPADINA KONNLEUCHTE SPINNBORGANG	SPINNE FÜR GLÜHLEUCHTE LAMP SOCKET
FA	FILTRO ANTIDISTURBO RADIO INTERFERENZA WASCHMILTUNGSBEREITIGER WASCHMILTUNGSBEREITIGER	FILTER ANTI-DISTURBO RADIO INTERFERENCE SUPPRESSOR DOSEUR DETRENTI DETERGENT DISPENSER
DD	POSIZIONE ANTICONGELANTE WASCHMILTUNGSBEREITIGER	POSITION ANTI-CONGELANTE DETERGENT DISPENSER
TS	TERMOSTATO SICUREZZA SICHERHEITSTHERMOSTAT	THERMOSTAT DE SECURITE SAFETY THERMOSTAT
MO	MORSETTIERA NETZSCHLUSSELKLEMMEN	BONNE DE CONNECTION MAIN TERMINAL BOARD
MP	MICROINTERRUTTORE PORTA TÜRSCHEALTER	MICROINTERRUPTEUR PORTE DOOR MICRO SWITCH
C1	CONTATTI PER LA LAMPADINA SCHLÜSSELSTUFT ELEKTROPUMPE	CONTACTEUR POUR LA LAMPADINA ELECTROPUMP CONTACTORS
C2/3	CONTATTI PER LA LAMPADINA SCHLÜSSELSTUFT HEIZER	CONTACTEURS RESISTANCE HEATERS CONTACTORS
M1	MICROMOTORE VELOCE SCHNELLER MIKROMOTOR	MICROMOTEUR RAPIDE FAST MICRO MOTOR
PT	PROTEZIONE TERMICA THERMISCHE SCHUTZ	PROTECTION THERMIQUE THERMAL PROTECTION
L3	SPINNA PER LA LAMPADINA KONNLEUCHTE "BETRIEBSBEREIT"	SPINNE FÜR GLÜHLEUCHTE "MACHINE READY" WARNING LAMP
C5/6	CONTATTI PER LA LAMPADINA LAUGENPUMPENKONTAKT	CONTACTEUR POMPE DE VIDANGE DRAIN PUMP CONTACTOR
PS	POMPA DI SCARICO ABFLUSSPUMPE	POMPE D'EGOUT DRAIN PUMP
ER	ELETTROVALVOLA RISCACQUO NACHSPÜLVENTIL	ELECTROVANNE DE RINÇAGE RINSE VALVE
EC	ELETTROVALVOLA CARICO W.A.G. FÜLLUNGSVENTIL W.A.G.	ELECTROVANNE DE CHARGE W.A.G. W.A.G. INLET VALVE
S1	SENSORE LIVELLO MASSIMO W.A.G. NIVEAUFÜHLER W.A.G.	CAPTEUR NIVEAU MAXIMUM W.A.G. W.A.G. MAXIMUM LEVEL SENSOR
PR	POMPA AUMENTO PRESSIONE DRUCKSTEUERUNGSPUMPE	POMPE DE RINÇAGE BOOSTER PUMP

COLLA GLUE	17 - 02 - 99	MGS	45 - 45 (DP)
DATA DATE		MUD	
DESIGN N.° DESIGN N.°		MUD	
ELABORAZIONE DRAWING	ELAT.131		

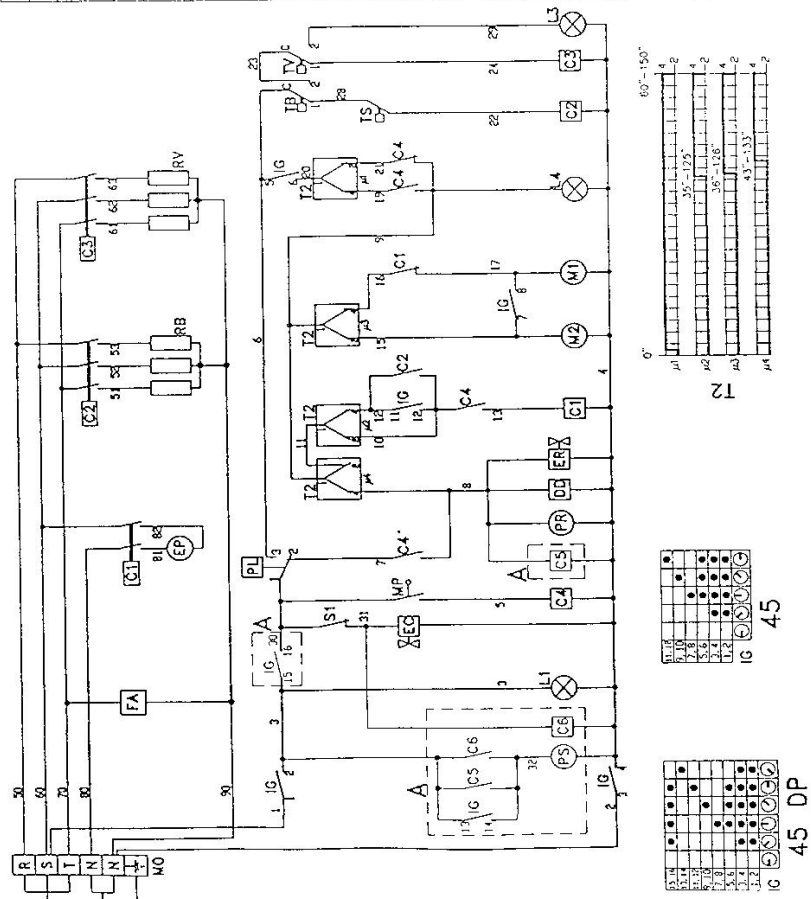

VERSIONE CON POMPA DI SCARICO
MODEL WITH DRAIN PUMP
A

COLLEGARE IL CAVO DI ALIMENTAZIONE AD UN SEZIONATORE A PARTE - RELIER LE CABLE D'ALIMENTATION A UN INTERRUPTEUR MURAL - CONNECT THE POWER-SUPPLY CABLE WITH A WALL DISCONNECTOR - BAUSSETS EST EN HAUPTSCHALTER ZU INSTALLIEREN

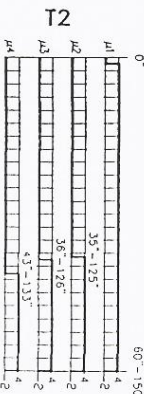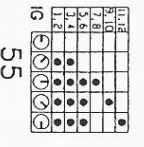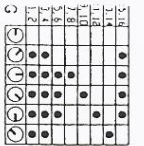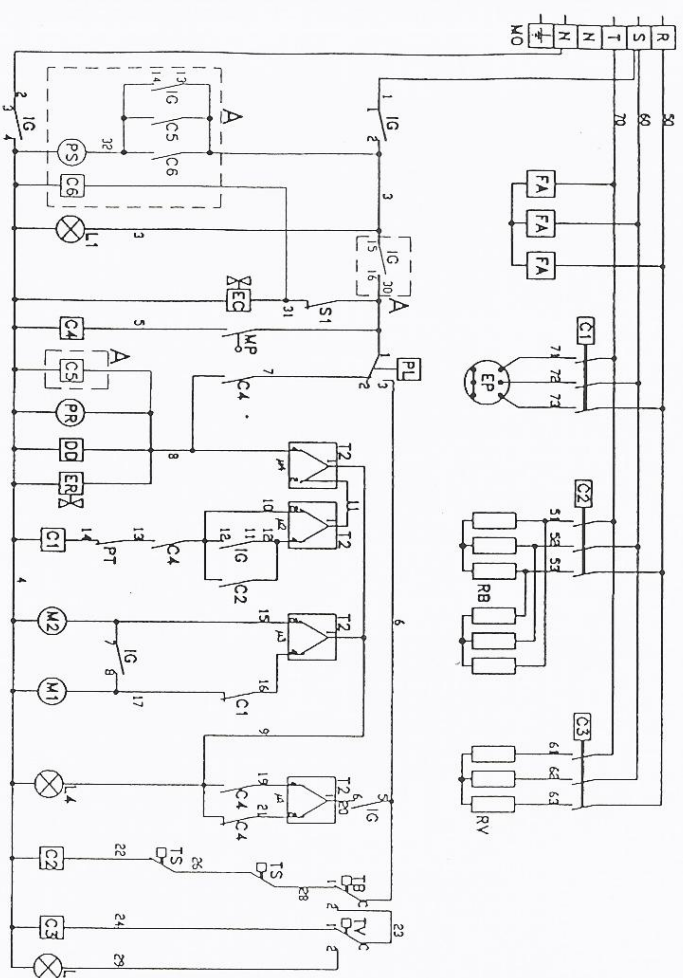


VERSIONE CON PUMP DI SCARICO
 MODEL AVCC PUMP OF VANDICE
A

VARIANTI DA
 APPORTARE AL
 COLLEGAMENTO
 BASE DI 380/415V 3N
 A DE TENSIONS D'AL-
 MENTATION DIFFERENTES

MODIFICAZIONE DA
 FARE PER
 PASSARE DA
 3N TO A DIFFERENTI
 SUPPLY VOLTAGE

ÄNDERUNGEN UM
 DAS GERÄT VON
 380/415V
 ANSCHLUSSMEREI
 UNZUSAMMEN
 ZU BRINGEN

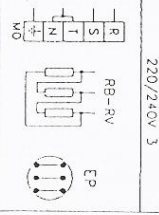

LEGGERE IL CABO DI ALIMENTAZIONE AD UN SEZIONATORE A PARTE - READER LE CABLE D'ALIMENTATION A UN INTERRUPTEUR MODUL - CONNECT THE POWER-SUPPLY
 CABLE WITH A WALL DISCONNECTOR - BUSSETS IST EN HAUPTSCHALTER ZU INSTALLIEREN

IG	INTERRUTTORE GENERALE HAUPTSCHALTER	INTERRUPTEUR GENERAL MAIN SWITCH
L1	SPINA INTERRUTTORE GENERALE HAUPTSCHALTERLAMPE	VOYANT LUMINEUX G ⁰ MAIN-SWITCH WARNING-LAMP
RV	RESISTENZA VASCA RANGHEIZKÖRPER	RESISTANCE CUVE TANK HEATER
RB	RESISTENZA BOILER BOILERLEISTUNG	RESISTANCE SURCHAUFFEUR BOILER HEATER
PL	PRESSOSTATO INNEA NINTEADRUCKWÄCHTER	PRESSOSTAT INNEAU ELECTROVANNAGE
EP	ELETTROPOMPA ELEKTROPUMPE	ELECTROPUMPE ELECTROPUMP
T2	TIMER CICLO SPULEVORGANG TIMER	TIMER CYCLE CYCLE TIMER
C4	CONTATTORE DI SERVIZIO KONTAKT	CONTACTEUR DE SERVICE SERVICE CONTACTOR
TB	TERMOSTATO BOILER BOILER THERMOSTAT	HERMOSTAT SURCHAUFFEUR BOILER THERMOSTAT
TV	TERMOSTATO VASCA TANKTHERMOSTAT	THERMOSTAT CUVE TANK THERMOSTAT
M2	MICROMOTORE TENGO LANGSOWER MIKROMOTOR	MICROMOTEUR TEN SLOW DOWN MOTOR
L4	SPA CICLO KONTROLLEUCHT SPULEVORGANG	VOYANT LUMINEUX CYCLE CYCLE LAMP
FA	FILTRO ANTIRISUBORO STOPSCHLEIERSTENGE	FILTRE ANTI PERFORATION RADIO INTERFERENCE SUPPRESSOR
DD	DOSSIERE GEREZIORE WASCHWITZDOSIERBALKEN	DOSSIER DETERGENT DETERGENT DISPENSER
TS	TERMOSTATO SICUREZZA SICHERHEITSTHERMOSTAT	THERMOSTAT DE SECURITE SAFETY THERMOSTAT
MO	BORELETTA NETZANSCHLUSSKLEMMEN	BOITE DE CONNECTION MAIN TERMINAL BOARD
MP	MICROMOTORE PORTA TÜRSCHALTER	MICROMOTEUR PORTE DOOR INTERLOCK SWITCH
C1	CONSTATTORE ELETTROPOMPA SCHALSCHWITZ ELEKTROPUMPE	CONTACTEUR ELECTROPUMPE ELECTROPUMP CONTACTORS
C2/3	CONSTATTORE RESISTENZE SCHALSCHWITZ HEIZKÖRPER	CONTACTEUR RESISTANCE HEATERS CONTACTORS
M1	MICROMOTORE VELOCE SCHNELLER MIKROMOTOR	MICROMOTEUR RAPIDE FAST MICRO MOTOR
PT	PROTEZIONE TECNICA TECHNISCHE SCHWIZ	PROTECTION TECHNIQUE TECHNICAL PROTECTION
L3	SPINA "MARCHIA FRONTA" KONTROLLEUCHT "BETRIEBSBEREIT"	VOYANT "MARQUE FRONT" "LAMPES PRET A MARCHE"
C5/6	CONSTATTORE POMA SCARICO LAUNCHPUMPENKONTAKT	CONTACTEUR POMPE DE VIDANGE DRAIN PUMP CONTACTOR
PS	POMPA DI SCARICO ABFLUSSPUMPE	POMPE DE VIDANGE DRAIN PUMP
ER	ELETTROPOMPA RISCACQUO NACHSPÜLWÄRMEL	ELECTROPUMPE DE RINÇAGE RINSE VALVE
EC	ELETTROPOMPA CARICO W.A.G. FÜLLUNGSWÄRMEL W.A.G.	ELECTROPUMPE DE CHARGE W.A.G. W.A.G. INLETT VALVE
S1	SENSORE LIVELLO MASSIMO W.A.G. NIVEAUPUMPE W.A.G.	CAPTEUR NIVEAU MAXIMUM W.A.G. W.A.G. MAXIMUM LEVEL SENSOR
PR	POMPA AUMENTO PRESSIONE DRUCKSTÄRKERUNGSPUMPE	POMPE DE RINÇAGE BOOSTER PUMP

DATA DATE	17 - 02 - 99	MDD MDD	55 - 55 (DP)
REVISIONE N° REVISIONING N°	EL.AT.132	MDD MDD	